



Jack Stands

Operating Instructions & Parts Manual

Model Number



HW93503

HW93506

Capacity

3 Ton

6 Ton

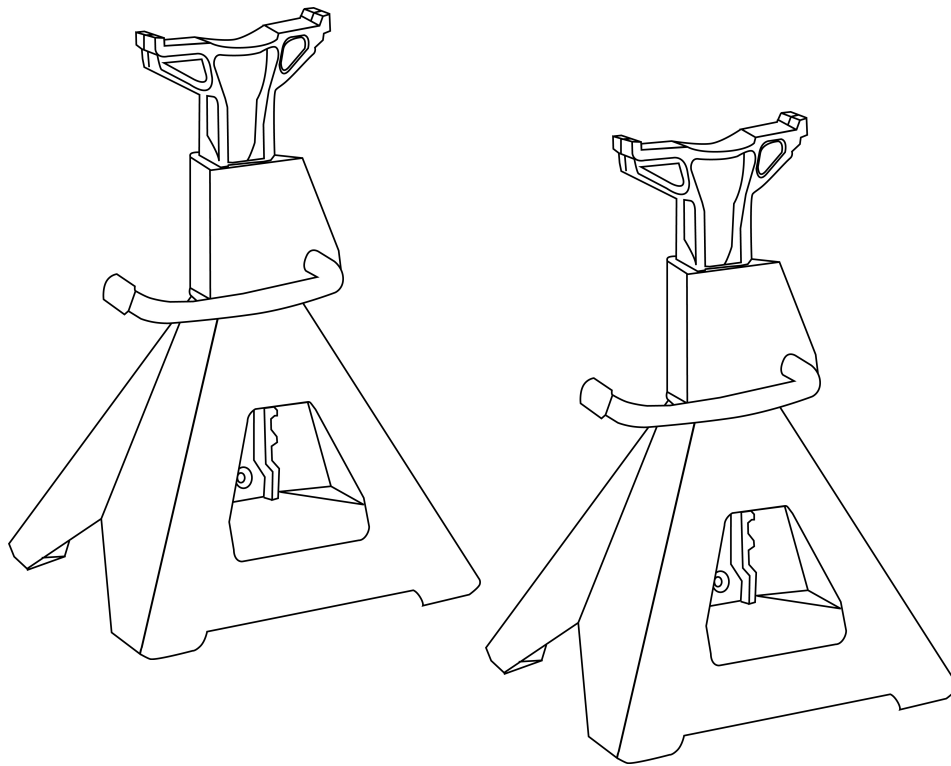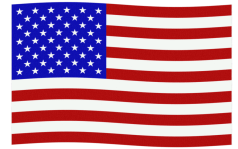

SFA Companies ©2004
10939 N. Pomona Ave. Kansas City, MO 64153
816-891-6390
customerservices@heinwerner-automotive.com

-Before using this product, read this manual and follow all its Safety Rules and Operating Instructions
HW93503-M0

TABLE OF CONTENTS

Warranty	P2
Save These Instructions	P3
Product Description	P3
Specifications & Safety Instructions	P3
Operation & Maintenance	P4



TWO YEAR LIMITED WARRANTY

For a period of two (2) years from date of purchase, SFA Companies will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship, or which fails to conform to any implied warranty not excluded hereby.

Performance of any obligation under this warranty may be obtained by returning the warranted product, freight prepaid, to SFA Companies Warranty Service Department, 10939 N. Pomona Ave., Kansas City, MO 64153. Except where such limitations and exclusions are specifically prohibited by applicable law:

(1) THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE.

(2) SFA COMPANIES SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER.

(3) THE DURATION OF ANY AND ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO A PERIOD OF TWO (2) YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SAVE THESE INSTRUCTIONS

For your safety, *read, understand and follow* the information contained within. The owner and operator shall have an understanding of this product and safe operating procedures before attempting to use this product. Instructions and Safety information shall be conveyed in the operators native language before use of this product is authorized. Make certain that the operator thoroughly understands the inherent dangers associated with the use and misuse of the product. If any doubt exists as to the safe and proper use of this product as outlined in this factory authorized manual, remove from service.

Inspect before each use. Do not use if there are broken, bent, cracked or otherwise damaged parts (including labels). If the jack stand has been or suspected to have been subjected to a shock load (a load dropped suddenly and unexpectedly upon it), discontinue use until inspected by an authorized factory service center. Owners and operators of this equipment shall be aware that the use of this equipment may require special training and knowledge. It is recommended that an annual inspection be done by qualified personnel and that any missing or damaged decals, warning / safety labels or signs be replaced with factory authorized replacements only. Any jack stand that appears to be damaged in any way, is worn or operates abnormally shall be removed from service and destroyed immediately

PRODUCT DESCRIPTION

Hein-Werner Jack Stands are designed to safely support one end of level, rated capacity loads, typically vehicles, for extended periods. Stamped steel construction, ductile iron ratchet bars and compliance with the latest **ASME / ANSI - PALD** standards ensure safety, strength and stability. Each comes with a ratchet / collar lock which prevents inadvertent loss of ratchet bar.

SPECIFICATIONS

Model	Capacity	Base Size	Min. Height	Max. Height
HW93503	3 Ton	8-3/16" x 9-1/4"	11 1/2"	17"
HW93506	6 Ton	11-5/8" x 12-3/8"	15 1/2"	24 3/4"

SAFETY INSTRUCTIONS

BEFORE USE

1. Verify that the product and the application are compatible, if in doubt call Hein-Werner Technical Service (816)891-6390.
2. Inspect stands before each use. Do not use if there are bent, broken or cracked components (including labels).
3. Ensure that all parts move freely.
4. Read the operator's manual completely and familiarize yourself thoroughly with the product and the hazards associated with its improper use **before** using this product.
5. Install ratchet bar into base frame with ratchet portion of bar aligned with locking pawl.
6. Move the ratchet bar to its lowest position by raising the locking handle and guiding the bar downward.
7. Insert cotter pin into the bottom hole of the ratchet bar to prevent inadvertent loss of the ratchet bar.
8. Always refer to the vehicle owners or service manual for location of proper lift and support points.

Note: Please refer to figure 1 and figure 2 at page 4 for location of components.



To avoid crushing and related injuries:
NEVER work on, under or around a load supported only by a jack. ALWAYS use adequately rated jack stands.

! Safety Messages !

Be sure all tools and personnel are clear before lowering load. Only attachments and/or adapters supplied by the manufacturer shall be used. Lift only on areas of the vehicle as specified by the vehicle manufacturer.

⚠️ WARNING

- Study, understand, and follow all instructions provided with and on this device before operating this device.
- Do not exceed rated capacity.
- Use only on hard, level surfaces capable of sustaining rated capacity loads.
- Center load on saddle.
- Use as a matched pair to support one end of a vehicle only.
- Jack stands are not to be used to simultaneously support both ends or one side of a vehicle.
- No alterations shall be made to this device.
- Do not use adapters or accessories that are not provided initially.
- Failure to heed these markings may result in personal injury and/or property damage.

⚠️ ADVERTENCIA

- Leer, comprender, y seguir las instrucciones antes de utilizar el aparato.
- El manual de instrucciones y la información de seguridad deben estar comunicados en lengua del operador antes del uso.
- No seguir estas indicaciones puede causar daños personales o materiales.

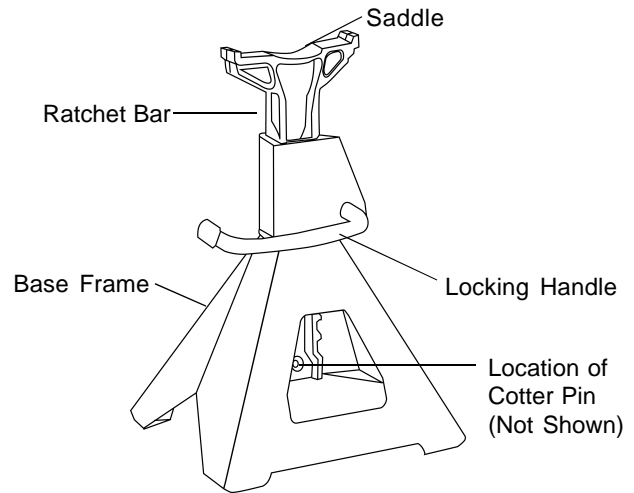


Figure 1. Jack Stand Components (with cotter pin to secure ratchet in collar)

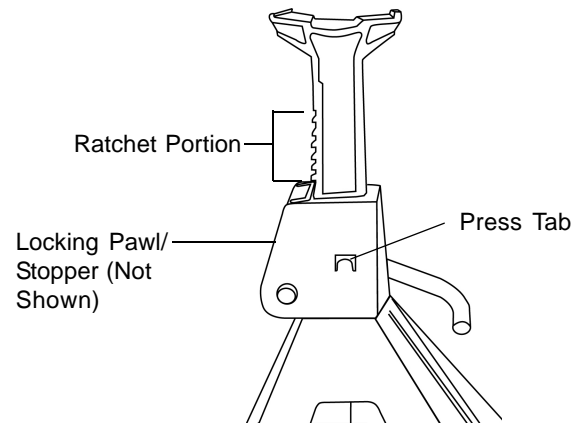


Figure 2. Press Tab Location

OPERATION

1. Adjust height by pulling up on ratchet bar.
2. Push down on the locking handle. The weight of the locking handle should secure the ratchet bar in desired position. Ensure ratchet is secure before loading.
3. *Carefully* position stands so that load is centered on stand's saddle.
4. *Slowly* lower the vehicle onto the stands.
5. Ensure vehicle is secure before working on, around or under. When used to support vehicle, use wheel chocks to prevent inadvertent movement.

NOTE: Jack stands are not to be used to simultaneously support both ends or one side of a vehicle. No alterations shall be made to this device. Do not use adapters or accessories on the saddle or base frame. No replacement parts are available for this device. Replace as a matched pair only.

To lower load

1. Raise vehicle clear of stands with suitable jack.
2. Raise the locking handle to release stopper and allow ratchet to glide down to lowest position.
3. *Carefully* remove stands.
4. *Carefully* lower vehicle with jack.
4. Ensure that all tools, equipment and personnel are clear before lowering load.

MAINTENANCE

To help prevent rust, wipe clean and/or blow dry after each use. Ensure locking handle moves freely under its own weight. Do not apply oil or lubricant to ANY portion of this product. Please note that there are no replacement parts applicable to this device.