


**PARTS BREAKDOWN**

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

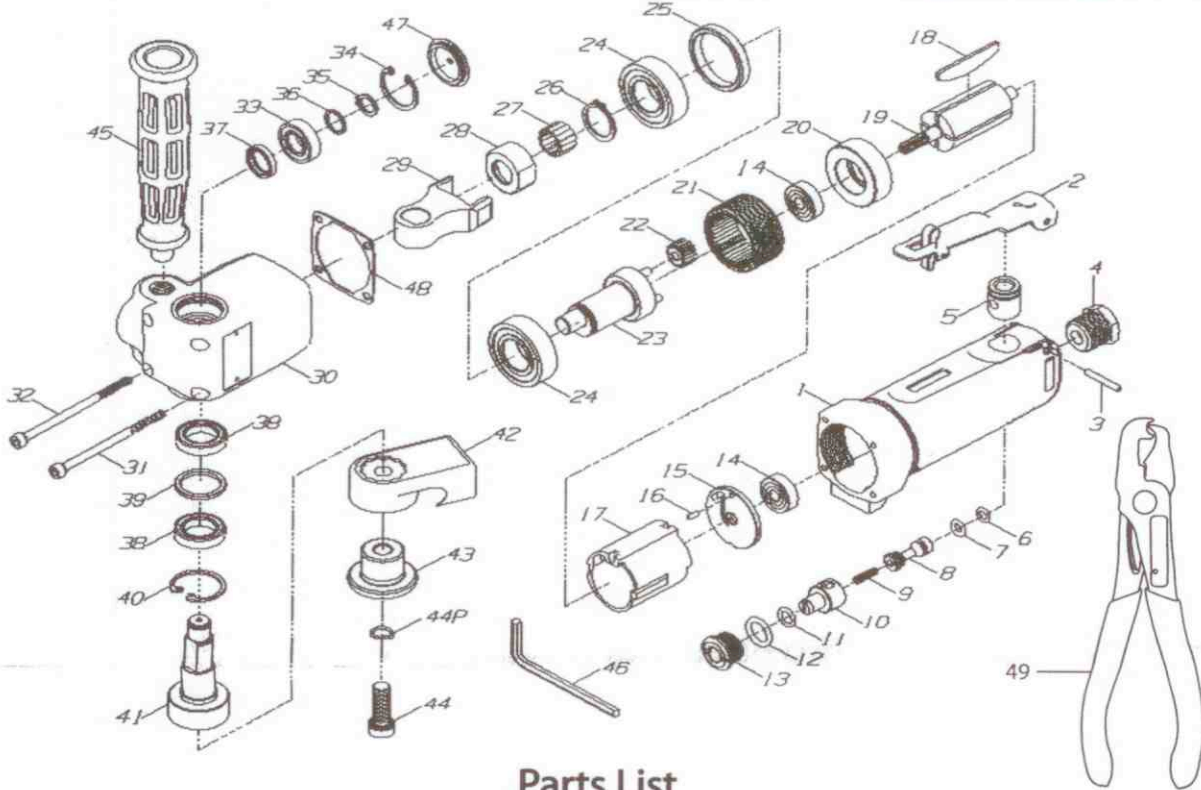

**Parts List**

Index No.	Part No.	Description	Qty	Index No.	Part No.	Description	Qty
1	DS2000-01	Motor Housing	1	26	DS2000-26	Retainer Ring	1
2	DS2000-02	Lever	1	27	DS2000-27	Needle	13
3	DS2000-03	Pin	1	28	DS2000-28	Needle Plate	1
4	DS2000-04	Inlet	1	29	DS2000-29	Drive Spindle	1
5	DS2000-05	Valve Bushing	1	30	DS2000-30	Angle Head	1
6	DS2000-06	O-Ring	1	31	DS2000-31	Screw	2
7	DS2000-07	O-Ring	1	32	DS2000-32	Screw	2
8	DS2000-08	Valve Stem	1	33	DS2000-33	Ball Bearing	1
9	DS2000-09	Valve Spring	1	34	DS2000-34	Retainer Ring	1
10	DS2000-10	Air Regulator	1	35	DS2000-35	Retainer Ring	1
11	DS2000-11	O-Ring	1	36	DS2000-36	Spacer	1
12	DS2000-12	O-Ring	1	37	DS2000-37	Spacer	1
13	DS2000-13	Valve Plug	1	38	DS2000-38	Ball Bearing	2
14	DS2000-14	Ball Bearing	2	39	DS2000-39	Spacer	1
15	DS2000-15	Rear End Plate	1	40	DS2000-40	Retainer Ring	1
16	DS2000-16	Pin	1	41	DS2000-41	Spindle	1
17	DS2000-17	Cylinder	1	42	DS2000-42	Blade	1
18	DS2000-18	Rotor Blade	4	43	DS2000-43	Plate	1
19	DS2000-19	Rotor	1	44	DS2000-44	Screw	1
20	DS2000-20	Front End Plate	1	44P	DS2000-44P	Spring Washer	1
21	DS2000-21	Internal Gear	1	45	DS2000-45	Handle	1
22	DS2000-22	Planet Gear	3	46	DS2000-46	Hex Wrench	1
23	DS2000-23	Planet Carrier	1	47	DS2000-47	Cover	1
24	DS2000-24	Baller Bearing	2	48	DS2000-48	Gasket	1
25	DS2000-25	Spacer	1	49	DS2000-49	Door Skin Starter Pliers	1